



Mains Tester

Stock No.64506

Part No.3022D

INSTRUCTIONS

- Testing range 100 - 250V AC.
- Place blade end into live aperture of socket and press your thumb against metal cap on handle.
- If supply is live, the neon bulb in the handle will light.
- Tester will not illuminate if placed in contact with neutral terminal, or if supply is dead.
- Always check bulb is working by using tester first on a live circuit.
- Do not use tester as a screwdriver or lever as this will damage the tester.