


14.4V & 18V CORDLESS DRILLS

■ STOCK Nos.69354
69353

■ PART Nos.CHD1402VPLUS
CHD1802VPLUS

SPARE PARTS LISTING & ASSEMBLY DRAWING 03/2003

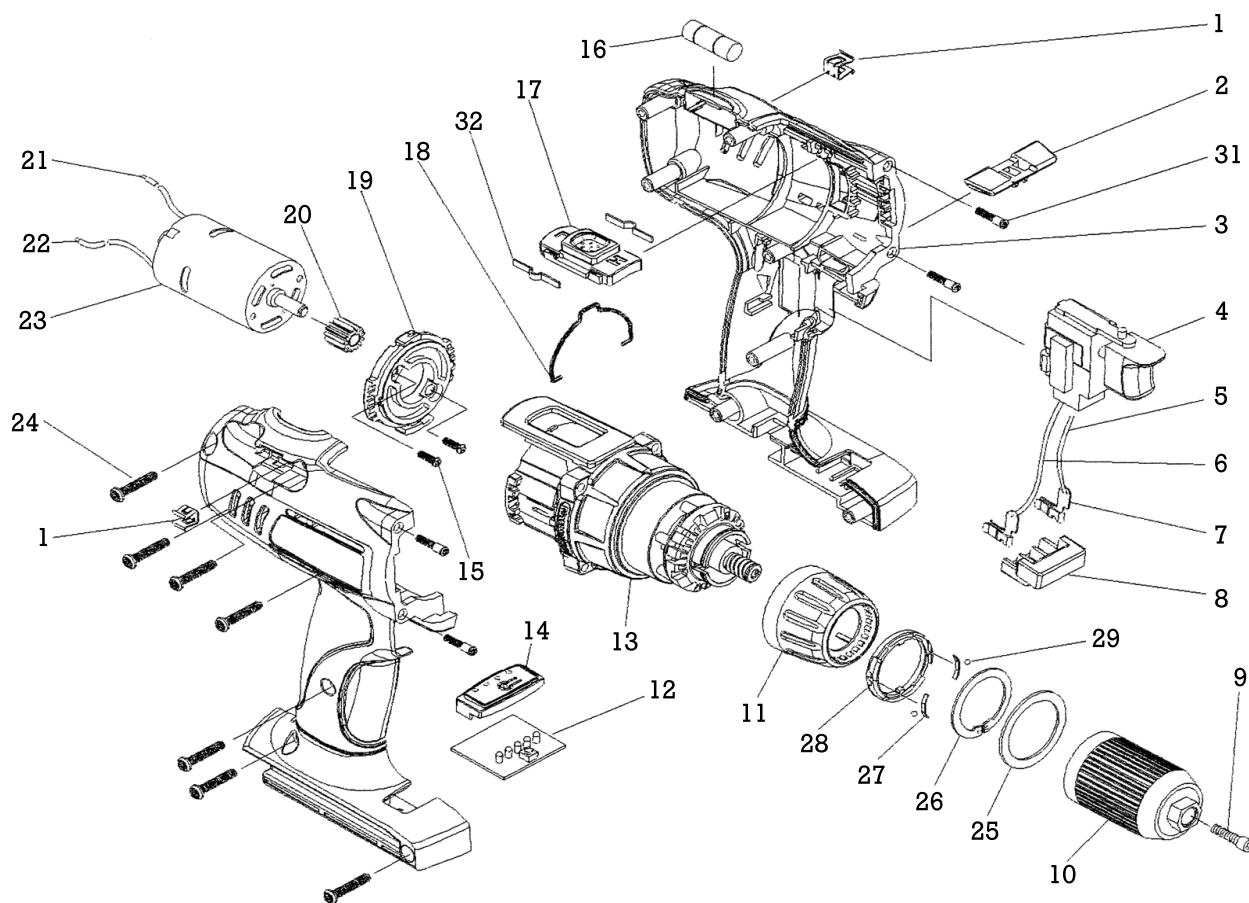

KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YCD-DCA1080010	71463	Bit Clamp
2	YCD-DPA0380100	71464	Direction Switch
3	YCD-DPA0081112	71465	Housing (14V)
	YCD-DPA0081122	71494	Housing (18V)
4	YCD-OIA0020690	71466	Trigger Switch
5	YCD-NWB0040880	71467	Wire
6	YCD-NWB0040782	71468	Wire
7	YCD-DCA0210090	71469	Thermal Plate
8	YCD-DPA0120150	71470	Thermal Plate Mount
9	YCD-DHB0020100	71471	Screw
10	ACD10	54698	Chuck
11	YCD-DPA0500310	71473	Torque Collar
12	YCD-ED-0140310	71472	14.4V Battery Indication PCB
	YCD-ED-0140320	71474	18V Battery Indication PCB
13	YCD-ED-0230450	71475	Gearbox ass'y
14	YCD-DPA1880000	71476	Display Panel
15	YCD-BMS0040390	71477	Screw (14V)
	YCD-BMS0050190	71495	Screw (18V)
16	YCD-DPA1580111	71478	Decorative Cover
17	YCD-DPA0280160	71479	Speed Select Switch
18	YCD-DHA0250011	71480	Speed Select Spring

KEY No.	PART No.	STOCK No.	DESCRIPTION
19	YCD-DPA0890090	71481	Motor Plate (14V)
	YCD-DPA0890100	71496	Motor Plate (18V)
20	YCD-DDC0030132	71482	Motor Pinion
21	YCD-NWB0040781	71483	Wire
22	YCD-NWB0040780	71484	Wire
23	YCD-OIA0030290	71485	14V Motor
	YCD-OIA0030390	71497	18V Motor
24	YCD-DHB0040020	71486	Housing Screw
25	YCD-DCA1050110	71487	Washer
26	YCD-BME0010090	71488	Circlip
27	YCD-DCA0370030	71489	Spring Plate
28	YCD-DPA1590020	71490	Plate
29	YCD-BMF0010030	71491	Steel Ball
31	YCD-DHB0040040	71492	Housing Screw
32	YCD-DCA1100000	71493	Spring Plate
*	CB14PLUS	69455	14V Battery Pack
*	CB18PLUS	69456	18V Battery Pack
*	CB141PLUS	69488	14V Charger
*	CB181PLUS	69487	18V Charger
*	YCD-BMF0030120	71616	Cross Slot Bit
*	YCD-BMF0030040	71617	Plain Slot Bit