



THE TOOL COMPANY

PATIO CLEANER ATTACHMENT

■ STOCK No.74080

■ PART No.APW41



THE TOOL COMPANY

ASSEMBLY

PRESSURE WASHERS




OTHER MODELS



PW2210



PW2220

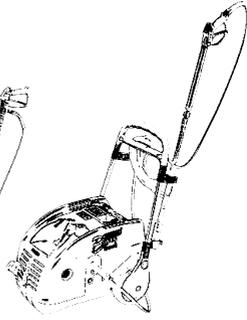

PW3000

ADAPTOR*



Optional Accessory
(Draper Stock No.75110)



EXTENSION PIECE



PATIO CLEANER



*To join patio cleaner onto trigger assembly in place of the high pressure lance.



GENERAL SAFETY INSTRUCTIONS

1. Read and understand instruction sheet prior to use.
2. Retain instruction sheet for future reference.
3. Wear safety goggles at all times during use.
4. Do not use in close proximity to, or aim at, people, pets, electrical outlets or the pressure washer.
5. Switch off and disconnect machine prior to adjustment, maintenance and servicing.
6. Do not place any body parts under the operating patio cleaner.



OPERATION & USE

With the cleaner correctly assembled to the pressure washer, set the pressure regulator on the patio cleaner head.

Slide the lever to low for applications on wood, i.e. fencing and decking.

The lever can be set on high for applications such as brickwork, concrete and patio, slabs.

Brush away the larger pieces of debris. Apply a suitable cleaning solution onto the surface using the foam bottle on the pressure washer. Finally clean the area using the patio cleaner attachment.



MAINTENANCE

Disconnect the pressure washer from the power supply. Using a spanner remove the high pressure nozzles.

Reconnect the pressure washer and operate the cleaner so water comes out under low pressure. Disconnect the pressure washer once again. Clean the high pressure nozzles with a pin like device to remove any grit causing a blockage.

Fit the cleaned nozzles back into the cleaner securely (do not overtighten as this may cause damage).

Reconnect the pressure washer and test.