



230V Cross Cut Paper & CD Shredder

Stock No.89425

Part No.PS9/CC

INSTRUCTIONS

12/2005



SPECIFICATION

The Draper Tools policy of continuous improvement determines the right to change specification without notice.

Stock No.	89425
Part No.	PS9/CC
Paper Inlet Size.....	229mm
Output Shred Dimension.....	5 x 32mm (approx.)
Max. Sheet Input at Any Time *	7 pieces
Max. CD at Any Time	1 piece
Recommended Run Time	2mins. ON continuously, 4 mins. OFF

*Based on standard 80 gram paper



SAFETY INSTRUCTIONS

- Store the paper shredder in a safe place which is out of the reach of children.
- To prolong service life, do not feed paper clips or staples into the shredder.
- To avoid injury, do not feed fingers, hair and neck ties into the shredder.
- To avoid overloading the shredder, feed no more than 7 pieces of paper into the shredder at a time.
- Do not leave plugged in while unattended.



ASSEMBLY

- Clip the upper and lower sections of the waste paper collection bin together.
- Place the shredder assembly over the bin and the paper shredder is ready for use.



OPERATION AND USE

- Slide the switch to the 'AUTO/ON' position, ensuring nothing is near the blade area.
- Feed the paper or cd into the inlet. Release the paper or cd as soon as it is taken up by the shredder to avoid injury.
- Should the paper or cd become stuck or jammed, slide the switch to the 'REV' position to reverse the feed.
- Do not feed more than 7 pieces of paper at a time and do not feed through documents that contain paper clips or staples, as this will shorten the life of the blades and motor dramatically.
- For continuous feed, switch the slide switch to the 'AUTO/ON' position.
- Always switch the shredder off and unplug it from the mains in between uses.

NOTE: It is good practice to double check the document prior to shredding to ensure no important documents are shredded inadvertently.

OAKC 211205

**DRAPER**[®]

230V Cross Cut Paper & CD Shredder

Stock No.89425

Part No.PS9/CC

INSTRUCTIONS

**DRAPER**[®]

DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.

**DRAPER**[®]

DECLARATION OF CONFORMITY

We :

Draper Tools Ltd.,
Hursley Road,
Chandler's Ford,
Eastleigh, Hampshire.
SO53 1YF
England.

Declare under our sole responsibility that the product:

Stock No:- **89425.**Part No:- **PS9/CC.**Description:- **Cross Cut Paper & CD Shredder.**

To which this declaration relates is in conformity with the following directive(s)

73/23/EEC, 89/336/EEC

With reference to

EN60950:2000, EN55014-1:2000+A1, EN61000-3-2:2000, EN61000-3-3:1995+A1, EN55014-2:1997+A1

J.N. Draper
Managing Director

23/12/2005