



DRAPER[®]

10 TONNE

HYDRAULIC PULLER KIT

50094



These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.


Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1. OPERATION AND USE

The Draper hydraulic puller can be used in either 2 leg or 3 leg modes with 3 different depth settings on the legs.


First set up your puller yoke and legs in the configuration to suit the workpiece.

- Unscrew the centre screw (A) from the ram until a total length of 80mm is withdrawn from the ram. Now screw the hydraulic ram body into the puller yoke and screw down until firm contact is made with the spindle and the legs are locked into the item to be pulled.

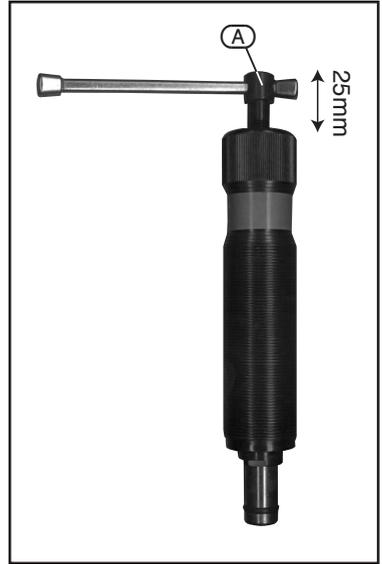


- Now turn the ram pressure screw (A) slowly into the ram until about 25mm remains or item to be pulled is released. Then unscrew to 80mm and re-tighten puller by screwing ram body into yoke and repeat the previous operation until the item being removed is free.


Important: Do not strike the hydraulic ram with a hammer or anything else, as this will cause the ram to fail and invalidate warranty.

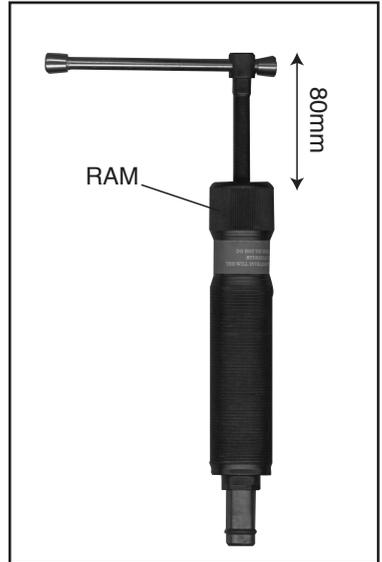

2. ASSEMBLY OPTIONS

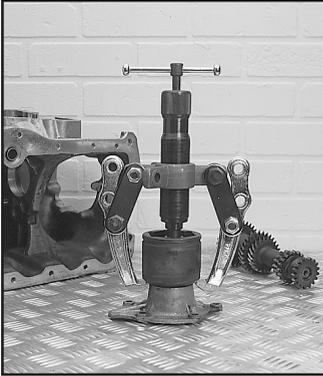

Diameter range.... 100-150mm
Reach range.....0-90mm

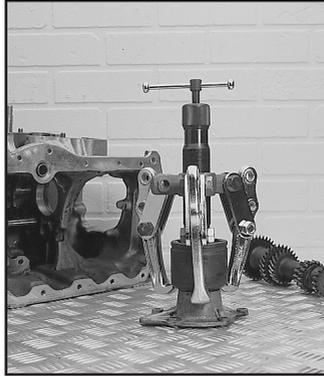


Diameter range.... 100-150mm
Reach range.....0-110mm




Diameter range.... 160-240mm
Reach range.....0-150mm



Diameter range.... 160-240mm
Reach range.....0-150mm

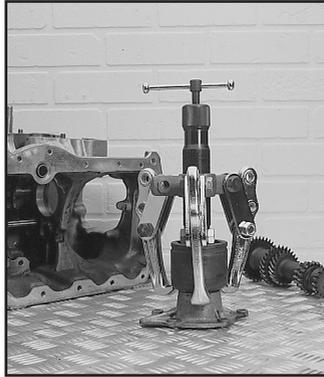

Diameter range.... 100-150mm
Reach range.....0-90mm

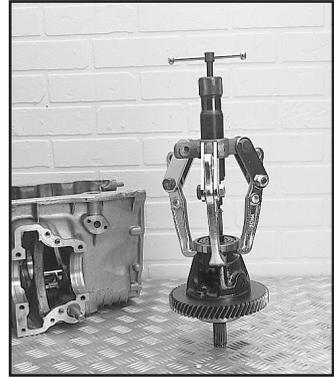

Diameter range.... 100-150mm
Reach range.....0-110mm



Diameter range.... 160-240mm
Reach range.....0-150mm



Diameter range.... 160-240mm
Reach range.....0-150mm

CONTACTS

Draper Tools Limited, Hursley Road,
Chandler's Ford, Eastleigh, Hampshire. SO53 1YF. U.K.

Helpline: (023) 8049 4344

Sales Desk: (023) 8049 4333

Internet: drapertools.com

E-mail: sales@drapertools.com

General Enquiries: (023) 8026 6355

Service/Warranty Repair Agent:

For aftersales servicing or warranty repairs, please contact the
Draper Tools Helpline for details of an agent in your local area.

YOUR DRAPER STOCKIST

PJKC0118

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.