



INSTRUCTIONS FOR 1050W 230V Hammer Drill

Stock No.83586 Part No.HD1150VKA

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1. TITLE PAGE

1.1 INTRODUCTION:

USER MANUAL FOR:

1050W 230V

Stock no. 83586.

Part no. HD1150VKA.

1.2 REVISIONS:

Date first published April 2016

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/manuals>

DRAPER TOOLS LIMITED

HURSLEY ROAD

CHANDLER'S FORD

EASTLEIGH

HAMPSHIRE

SO53 1YF

UK

WEBSITE: drapertools.com

PRODUCT HELPLINE: +44 (0) 23 8049 4344

GENERAL FAX: +44 (0) 23 8026 0784

1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:

WARNING! Information that draws attention to the risk of injury or death.

CAUTION! Information that draws attention to the risk of damage to the product or surroundings.

1.4 COPYRIGHT © NOTICE:

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

2. CONTENTS

2.1 CONTENTS

<i>Page content</i>	<i>Page</i>
1	TITLE PAGE
1.1	INTRODUCTION 2
1.2	REVISION HISTORY 2
1.3	UNDERSTANDING THIS MANUAL 2
1.4	COPYRIGHT NOTICE 2
2	CONTENTS 3
3	GUARANTEE 4
3.1	GUARANTEE 4
4	INTRODUCTION
4.1	SCOPE 5
4.2	SPECIFICATION 5
4.3	HANDLING & STORAGE 5
5	HEALTH & SAFETY INFORMATION
5.1	GENERAL POWER TOOL SAFETY WARNINGS 6
5.2	ADDITIONAL SAFETY INSTRUCTIONS 7
5.3	CAUTION: RISK OF ELECTRIC SHOCK. DO NOT OPEN. 7
6	TECHNICAL DESCRIPTION
6.1	IDENTIFICATION 8
7	UNPACKING & CHECKING
7.1	PACKAGING 9
7.2	WHAT'S IN THE BOX? 9
8	PREPARING THE HAMMER DRILL
8.1	AUXILIARY HANDLE 10
8.2	DRILL BIT STORAGE 10
9	BASIC HAMMER DRILL OPERATIONS
9.1	SWITCH OPERATION 11
9.2	SPEED SELECTION SWITCH 11
9.3	IMPROPER USE 12
9.4	DRILLING WOOD AND PLASTIC 12
9.5	DRILLING METAL 12
9.6	SCREWDRIVING 12
9.7	DUST AND SWARF 12
10	MAINTENANCE
10.1	MAINTENANCE 13
11	TROUBLESHOOTING 14
12	EXPLANATION OF SYMBOLS
12.1	EXPLANATION OF SYMBOLS 15
13	DISPOSAL
13.1	DISPOSAL 15
	DECLARATION OF CONFORMITY ENCLOSED

3. GUARANTEE

3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England. Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee period covering parts/labour is 12 months from the date of purchase except where tools are hired out when the guarantee period is 90 days from the date of purchase. The guarantee is extended to 24 months for parts only. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

4. INTRODUCTION

4.1 SCOPE

This hammer drill is designed for use with a variety of drill bits, intended for boring holes in wood, plastic, metal, brick etc. Applications such as screwing and some light duty polishing or sanding can be achieved with the correct accessories.

4.2 SPECIFICATION

Stock no.	83586
Part no.	HD1150VKA
Rated voltage	230V~50Hz
Rated input	1050W
Drilling capacity:	
Mild steel	13mm
Masonry	16mm
Wood	40mm
Revolutions per minute (no load)	0-1050 / 0-3000min ⁻¹
Impact rate	16800/48000min ⁻¹
Spindle thread.....	½" x20UNF
Chuck capacity	1.5-13mm
Sound pressure level	100±3dB(A)
Sound power level	111±3dB(A)
Vibration level.....	18.86m/s ²
Weight (net)	3.2kg

4.3 HANDLING & STORAGE

Although this machine is small in size, care must still be taken when handling and lifting. Dropping this machine will have an effect on the accuracy and may also result in personal injury. This machine is not a toy and must be respected.

The environment will have a negative result on its operation if you are not careful. If the air is damp, components will rust. If the machine is unprotected from dust and debris; components will become clogged: And if not cleaned and maintained correctly or regularly the machine will not perform at its best.

5. HEALTH & SAFETY INFORMATION

5.1 GENERAL POWER TOOL SAFETY WARNINGS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

5. HEALTH & SAFETY INFORMATION

5.2 ADDITIONAL SAFETY INSTRUCTIONS

- Wear ear protectors with impact drills. Exposure to noise can cause hearing loss.
- Use auxiliary handles supplied with the tool. Loss of control can cause personal injury.
- Wear eye protection.
- Wear dust mask.

5.3 CAUTION: RISK OF ELECTRIC SHOCK. DO NOT OPEN.

Caution: Risk of electric shock. Do not open.

This appliance is supplied with a moulded 3 pin mains plug for your safety. The value of the fuse fitted is marked on the pin face of the plug. Should the fuse need replacing, ensure the substitute is of the correct rating, approved to BS1362 and ASTA or BS Kite marked.

ASTA 

BSI 


The fuse cover is removable with a small plain slot screwdriver. Ensure the fuse cover is replaced before attempting to connect the plug to an electrical outlet. If the cover is missing, a replacement must be obtained or the plug replaced with a suitable type.

If a replacement plug is to be fitted this must be carried out by a qualified electrician.

The damaged or incomplete plug, when cut from the cable should be disabled to prevent connection to a live electrical outlet.

This appliance is Class II[†] and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instruction supplied with the extension lead.

[†]Double insulated : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

Important: On products exceeding 2000W it is recommended that the power cable and/or extension cable are fully unwound before a connection is made to the power supply. However, ensure the residual cable does not pose a trip hazard

6. TECHNICAL DESCRIPTION

6.1 IDENTIFICATION



- ① Key less chuck
- ② Speed selection switch
- ③ Mode selection switch
- ④ Trigger lock
- ⑤ Moulded plug & cable

- ⑥ Trigger
- ⑦ Variable speed dial
- ⑧ Forward/reverse selector

7. UNPACKING & CHECKING

7.1 PACKAGING

Carefully remove the drill from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the drill.

 
The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

Warning! Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

7.2 WHAT'S IN THE BOX?

As well as the drill; there are several parts not fitted or attached to it.

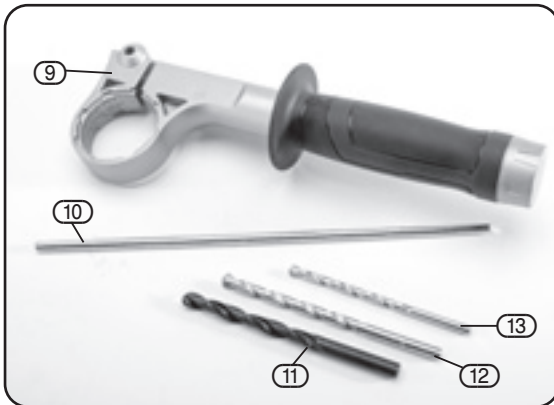

- ⑨ Auxiliary handle (with drill bit storage)
- ⑩ Depth guide
- ⑪ 6mm HSS drill bit
- ⑫ 8mm Masonry drill bit
- ⑬ 6mm Masonry drill bit

8. PREPARING THE HAMMER DRILL

 
IMPORTANT: Make sure that the mains voltage matches the voltage stated on the machine's rating plate.

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

8.1 AUXILIARY HANDLE - FIG. 1


WARNING: Use auxiliary handle supplied with the tool. Loss of control can cause personal injury.

- i Ensure the hand grip (9) is loose (screw anti-clockwise to loosen).
- ii Slide it over the drill's chuck (1) onto the collar.
- iii Select the required angle of the handle and tighten the handgrip to secure.
- iv To fit the depth guide (10) into the auxiliary handgrip (9), loosen the grip (screw anti-clockwise to loosen).
- v Insert the depth guide (10) into the adjustable handle and position for the correct depth, then tighten grip (screw clockwise to tighten).

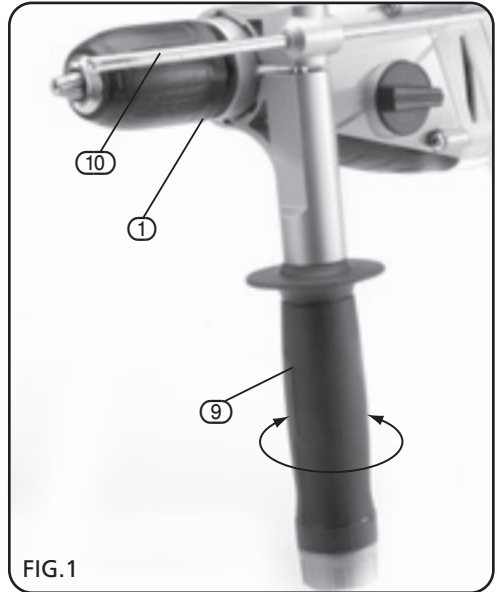

8.1 DRILL BIT STORAGE- FIG. 1

 The auxiliary handle (9) has a handy storage solution for commonly used drill bits; unscrew the cap (9.1) from the end to access bits.

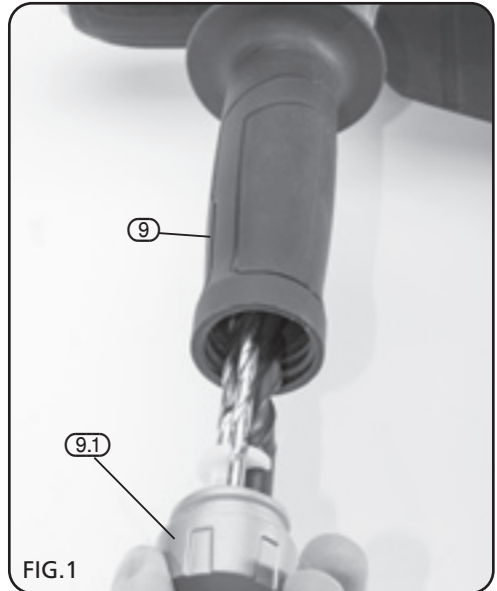

9. BASIC HAMMER DRILL OPERATIONS

9.1 SWITCH OPERATION – FIGS. 2 & 3

TRIGGER

- i To activate the drill, press the trigger (6).
- ii To operate the drill for prolonged periods, press and hold the trigger (6).
- iii Press the switch lock button (4) and hold.
- iv Release the trigger (6) and lock button (4).

NOTE: To stop the drill, press the trigger (6) once.

NOTE: The speed of the drill will vary depending on the amount the trigger is pulled.

SPEED REGULATOR:

The amount the trigger can be pulled (and the maximum speed of the drill) can be limited.

- i Rotate the speed dial (7) clockwise to restrict the drill speed.


DIRECTION OF ROTATION:

This drill is equipped with a reverse function to help remove jammed drill bits, etc.

- i Move the selector (8) to the right to engage reverse.

MODE SELECTION:

When drilling masonry, selecting the percussion mode will improve performance.

- i Ensure the chuck is stationary (stopped).
- ii Slide to mode selection switch (3) to the percussion setting .

 
 
9.2 SPEED SELECTION SWITCH

The gearbox enables different drill speeds. There are two settings, low or high, which should be selected based on material and bit size.

Typically harder materials should be drilled slower.

- i Stop the drill completely.
- ii Rotate the speed selection switch (2) to the desired setting.

Note: The numbers 1 & 2 cast in the machine body indicates the selected speed.

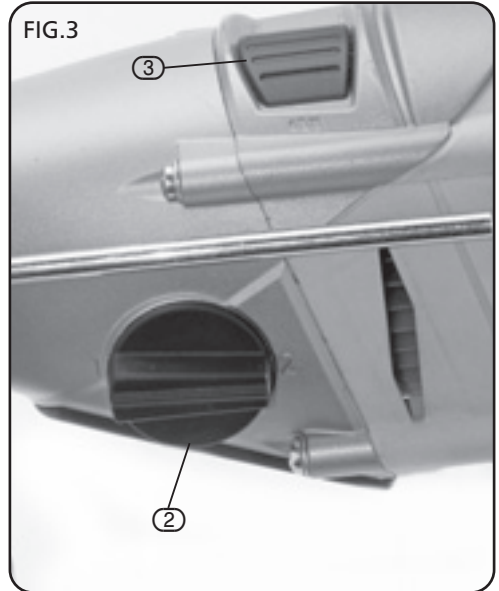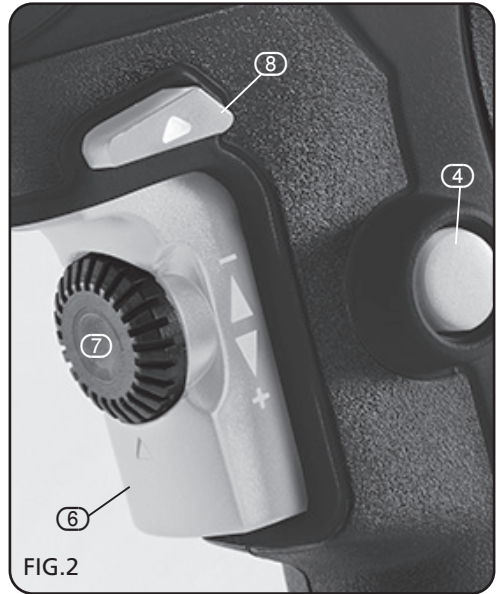

9. BASIC HAMMER DRILL OPERATIONS

9.3 IMPROPER USE

The function and use of this tool are those exclusively indicated in this manual.

9.4 DRILLING WOOD AND PLASTIC

To prevent wood splitting around the drill holes on the reverse side, place a piece of scrap timber under the material to be drilled.

9.5 DRILLING METAL

Metals such as sheet steel, aluminium and brass may be drilled. Mark the point to be drilled with a centre punch to help the drill bit tip to locate.

9.6 SCREWDRIVING

To prevent a slip or damage to the screwhead, match the screwdriver bit to the screwhead size. To remove screws, move the direction switch to the reversing position and apply pressure to the screwhead and depress the trigger slowly.

NOTE: Screwdriver bits are a consumable item.

WARNING: Before drilling check that there are no hidden hazards such as electrical cables, water or gas pipes running below the surface - use a metal/voltage detector.

Do not expose either the drill to rain or water.

9.7 DUST AND SWARF

A correctly fitted dust mask, suitable for the activity and in accordance to the relevant standard must be worn.

Swarf produced by metal drilling is extremely sharp. Take precautions when clearing swarf. The burr left on the hole is also sharp and should be removed with a suitable tool.

Always wear safety goggles.

WARNING: Drill bit will be hot after use.

10. MAINTENANCE

10.1 MAINTENANCE

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

The hammer drill does not require any special maintenance. Regularly clean/vacuum the ventilation slots. Use only a mild cleaner and a damp cloth to clean the tool.

11. TROUBLESHOOTING

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

PROBLEM	POSSIBLE CAUSE	REMEDY
Motor does not start.	1. Fuse.	1. Replace/reset 13 amp time delay fuse or circuit breaker.
	2. Brushes worn.	2. Have carbon brushes replaced in motor.
	3. Unsure.	3. Return to an authorised service agent for diagnosis.

12. EXPLANATION OF SYMBOLS

12.1 EXPLANATION OF SYMBOLS



WEEE
Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish



Warning!
Wear dust mask.



For indoor use.
Do not expose to rain.



Warning!
Wear goggles.



Warning!
Read instruction manuals before operating and servicing this equipment.



Warning!
Wear ear defenders.



Class II construction
(Double insulated).

13. DISPOSAL

13.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE* as unsorted municipal waste.



* Waste Electrical & Electronic Equipment.

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs, please
contact the Draper Tools Helpline for details of an
agent in your local area.

YOUR DRAPER STOCKIST

RDMC0416

