

# DRAPER®

## INSTRUCTIONS FOR 1500W 110V 50L Wet & Dry Vacuum Cleaner

Stock No.75443 Part No.WDV50SS/110A

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



CE

DRAPER®

### GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

# 1. TITLE PAGE

---

## **1.1 INTRODUCTION:**

USER MANUAL FOR:

**1500W 110V 50L WET & DRY VACUUM CLEANER**

Stock no. 75443

Part no. WDV505S/110A

## **1.2 REVISIONS:**

\_\_\_\_\_  
Date first published September 2015.  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/manuals>

DRAPER TOOLS LIMITED

HURSLEY ROAD

CHANDLER'S FORD

EASTLEIGH

HAMPSHIRE

SO53 1YF

UK

WEBSITE: [www.drapertools.com](http://www.drapertools.com)

PRODUCT HELPLINE: +44 (0) 23 8049 4344

GENERAL FAX: +44 (0) 23 8026 0784

## **1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:**

**WARNING!** Information that draws attention to the risk of injury or death.

**CAUTION!** Information that draws attention to the risk of damage to the product or surroundings.

## **1.4 COPYRIGHT © NOTICE:**

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only.

Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

---

# 2. CONTENTS

---

## 2.1 CONTENTS

|    | <i>Page</i>  |          |
|----|--|----------|
| 1  | TITLE PAGE   |          |
|    | 1.1 INTRODUCTION .....                                   | 2        |
|    | 1.2 REVISION HISTORY .....                               | 2        |
|    | 1.3 UNDERSTANDING THIS MANUAL .....                      | 2        |
|    | 1.4 COPYRIGHT NOTICE .....                               | 2        |
| 2  | CONTENTS   |          |
|    | 2.1 CONTENTS .....                                       | 3        |
| 3  | GUARANTEE  |          |
|    | 3.1 GUARANTEE .....                                      | 4        |
| 4  | INTRODUCTION   |          |
|    | 4.1 SCOPE .....  | 5        |
|    | 4.2 SPECIFICATION .....                                  | 5        |
|    | 4.3 HANDLING & STORAGE .....                             | 5        |
| 5  | HEALTH & SAFETY INFORMATION                              |          |
|    | 5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE ..... | 6        |
|    | 5.2 CONNECTION TO THE POWER SUPPLY .....                 | 7        |
| 6  | TECHNICAL DESCRIPTION                                    |          |
|    | 6.1 IDENTIFICATION .....                                 | 8        |
| 7  | UNPACKING & CHECKING                                     |          |
|    | 7.1 PACKAGING .....                                      | 9        |
|    | 7.2 WHAT'S IN THE BOX? .....                             | 9        |
| 8  | INITIAL MACHINE ASSEMBLY                                 |          |
|    | 8.1 FITTING THE REAR WHEELS .....                        | 10       |
|    | 8.2 FITTING THE CASTORS .....                            | 10       |
|    | 8.3 TANK DRAIN CAP .....                                 | 10       |
| 9  | VACUUMING DRY DUST AND DIRT                              |          |
|    | 9.1 EMPTY TANK .....                                     | 11       |
|    | 9.2 REMOVAL OF THE ANTI-FOAM FILTER .....                | 11       |
|    | 9.3 FIXING CARTRIDGE FILTER .....                        | 11       |
|    | 9.4 FIXING THE PAPER DUSTBAG .....                       | 11       |
|    | 9.5 REFITTING THE MOTOR HOUSING .....                    | 12       |
|    | 9.6 CONNECTING ATTACHMENTS .....                         | 12       |
|    | 9.7 SWITCHING ON .....                                   | 13       |
|    | 9.8 POWER TAKE-OFF SOCKET .....                          | 13       |
| 10 | VACUUMING FLUIDS   |          |
|    | 10.1 EMPTY TANK .....                                    | 14       |
|    | 10.2 REMOVE THE CARTRIDGE FILTER .....                   | 14       |
|    | 10.3 FITTING THE ANTI-FOAM FILTER .....                  | 14       |
|    | 10.4 REFIT MOTOR HOUSING .....                           | 14       |
|    | 10.5 FITTING LARGE FLUID NOZZLE .....                    | 15       |
|    | 10.6 SWITCHING ON .....                                  | 15       |
|    | 10.7 WATER ON LARGE AREAS .....                          | 15       |
| 11 | MAINTENANCE & PARTS REPLACEMENT                          |          |
|    | 11.1 TROUBLESHOOTING GUIDE .....                         | 16       |
| 12 | OPTIONAL ACCESSORIES                                     |          |
|    | 12.1 OPTIONAL ACCESSORIES .....                          | 17       |
| 13 | EXPLANATION OF SYMBOLS/PICTOGRAMS                        |          |
|    | 13.1 EXPLANATION OF SYMBOLS/PICTOGRAMS .....             | 18       |
| 14 | DISPOSAL   |          |
|    | 14.1 DISPOSAL .....                                      | 19       |
|    | DECLARATION OF CONFORMITY .....                          | ENCLOSED |

## 3. GUARANTEE

---

### 3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England. Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee period covering parts/labour is twelve months from the date of purchase except where tools are hired out when ninety days from the date of purchase. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

**Draper Tools Limited.**

## 4. INTRODUCTION

---

### 4.1 SCOPE

Robust, stainless steel tank vacuum cleaner. Designed to pick up both wet and dry materials. Ideally suited for trade/professional use.

### 4.2 SPECIFICATION

|   |                       |
|---|-----------------------|
| Stock no .....                          | 75443                 |
| Part no .....                           | WDV50SS/110A          |
| Motor:                                  |                       |
| Rated voltage .....                     | 110V~                 |
| Rated frequency .....                   | 50Hz                  |
| Rated input .....                       | 1500W                 |
| Insulation class .....                  | Class I               |
| Maximum suction/vacuum .....            | 22Kpa (220mbar)       |
| Maximum air flow .....                  | 65L/s                 |
| Power take off rating .....             | 1000W (max)           |
| Tank capacity – liquid .....            | 50L                   |
| Sound pressure level .....              | 76dB(A)               |
| Dimensions (D × W × H) .....            | 530mm × 500mm × 745mm |
| Appliance weight (no attachments) ..... | 10kg                  |

### 4.3 HANDLING & STORAGE

The environment will have a negative result on its operation if you are not careful. If the air is damp, components will rust. If the machine is unprotected from dust and debris; components will become clogged: And if not cleaned and maintained correctly or regularly the machine will not perform at its best.

## 5. HEALTH & SAFETY INFORMATION

---

### 5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE

When using any type of power tool there are steps that should be taken to make sure that you, as the user, remain safe.

Common sense and a respect for the tool will help reduce the risk of injury.

**Read the instruction manual fully.** Do not attempt any operation until you have read and understood this manual.

Most important you must know how to safely start and stop this machine, especially in an emergency.

**Keep the work area tidy and clean.**

Attempting to clear clutter from around the machine during use will reduce your concentration. Mess on the floor creates a trip hazard. Any liquid spilt on the floor could result in you slipping.

**Find a suitable location.** If the machine is bench mounted; the location should provide good natural light or artificial lighting as a replacement. Avoid damp and dust locations as it will have a negative effect on the machine's performance.

If the machine is portable; do not expose the tool to rain. In all cases do not operate power tools near any flammable materials.

**Beware of electric shock.** Avoid contact with earthed surfaces; because they can conduct electricity if there is an electrical fault with the power tool. Always protect the power cable and route it away from danger.

**Keep bystanders away.** Children, onlookers and passers by must be restricted from entering the work area for their own protection. The barrier must extend a suitable distance from the tool user.

**Unplug and house all power tools that are not in use.** A power tool should never be left unattended while connected to the power supply. They must be housed in a suitable location, away locked up and from children.

**Do not overload or misuse the tool.** All tools are designed for a purpose and are limited to what they are capable of doing. Do not

attempt to use a power tool (or adapt it in any way) for an application it is not designed for. Select a tool appropriate for the size of the job. Overloading a tool will result in tool failure and user injury: This covers the use of accessories.

**Dress properly.** Loose clothing, long hair and jewellery are all dangerous because they can become entangled in moving machinery: This can also result in parts of body being pulled into the machine.

Clothing should be close fitted, with any long hair tied back and jewellery and neck ties removed. Footwear must be fully enclosed and have a nonslip sole.

**Wear personal protective equipment (PPE).** Dust, noise, vibration and swarf can all be dangerous if not suitably protected against. If the work involving the power tool creates dust or fumes; wear a dust mask. Vibration to the hand, caused by operating some tools for longer periods must be protected against. Wear vibration reducing gloves and allow long breaks between uses. Protect against dust and swarf by wearing approved safety goggles or a face shield. These are some of the more common hazards and preventions; however, always find out what hazards are associated with the machine/work process and wear the most suitable protective equipment available.

**Do not breathe contaminated air.** If the work creates dust or fumes; connect the machine (if possible) to an extraction system either locally or remotely. Working outdoors can also help if possible.

**Move the machine as instructed.** If the machine is hand held, do not carry it by the power supply cable. If the product is heavy; employ a second or third person to help move it safely or use a mechanical device. Always refer to the instructions for the correct method.

## 5. HEALTH & SAFETY INFORMATION

---

**Do not overreach.** Extending your body too far can result in a loss of balance and you falling. This could be from a height or onto a machine and will result in injury.

**Maintain your tools correctly.** A well maintained tool will do the job safely. Replace any damaged or missing parts immediately with original parts from the manufacturer. As applicable; keep blades sharp; moving parts clean, oiled or greased; handles clean; and emergency devices working.

**Wait for the machine to stop.** Unless the machine is fitted with a safety brake; some parts may continue to move due to momentum. Wait for all parts to stop; then unplug it from the power supply before making any adjustments, carrying out maintenance operations or just finishing using the tool.

**Remove and check setting tools.** Some machinery requires the use of additional tools or keys to set, load or adjust the power tool. Before starting the power tool always check to make certain they have been removed and are safely away from the machine.

**Prevent unintentional starting.** Before plugging any machine in to the power supply, make sure the switch is in the OFF position. If the machine is portable; do not hold the machine near the switch and take care when putting the machine down; that nothing can operate the switch.

**Carefully select an extension lead.** Some machines are not suitable for use with extension leads. If the tool is designed for use outdoors; use an extension lead also suitable for that environment. When using an extended lead, select one capable of handling the current (amps) drawn by the machine in use. Fully extend the lead regardless of the distance between the power supply and the tool. Excess current (amps) and a coiled extension lead will both cause the cable to heat up and can result in fire.

**Concentrate and stay alert.** Distractions are likely to cause an accident. Never operate a power tool if you are under the influence of drugs (prescription or otherwise), including alcohol or if you are feeling tired. Being disorientated will result in an accident.


**Have this tool repaired by a qualified person.** This tool is designed to conform to the relevant international and local standards and as such should be maintained and repaired by someone qualified; using only original parts supplied by the manufacturer: This will ensure the tool remains safe to use.

### 5.2 CONNECTION TO THE POWER SUPPLY

This machine should be connected to a 16amp power supply either using the appropriate blue 16amp plug or directly into the fused mains supply. Both of these operations should be carried out by a qualified electrician.

This appliance is Class I<sup>†</sup> and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.



If an extension lead is required, use an approved and compatible lead rated for this appliance. Follow all the instruction supplied with the extension lead.

<sup>†</sup>Earthed  : This product requires an earth connection to protect against electric shock from accessible conductive parts in the event of a failure of the basic insulation.

**Important:** On products exceeding 2000W it is recommended that the power cable and/or extension cable are fully unwound before a connection is made to the power supply. However, ensure the residual cable does not pose a trip hazard.

## 6. TECHNICAL DESCRIPTION

### 6.1 IDENTIFICATION

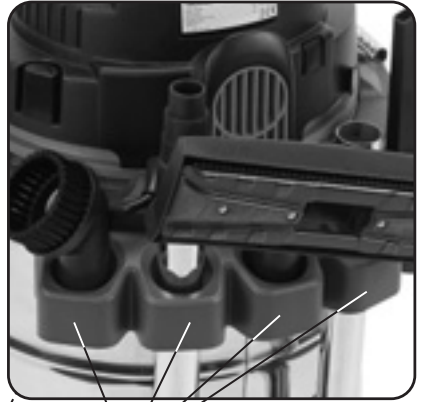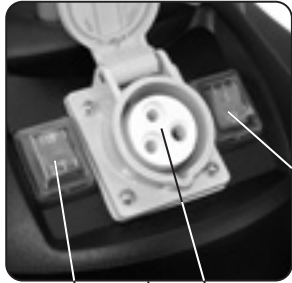

- ① Tank.
- ② Vacuum hose connector.
- ③ Main vacuum switch.
- ④ Power take off socket.
- ⑤ Power take off switch.
- ⑥ Tank catches x 2.
- ⑦ Mains plug and cable.
- ⑧ Tank drain.
- ⑨ Attachment tool storage.
- ⑩ Handle.
- ⑪ Castors x 2.
- ⑫ Rear wheels x 2.



# 7. UNPACKING & CHECKING

## 7.1 PACKAGING

Carefully remove the wet and dry vacuum cleaner from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the vacuum cleaner.


The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

**Warning!** Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

## 7.2 WHAT'S IN THE BOX?

As well as the wet and dry vacuum cleaner; there are several parts not fitted or attached to it.

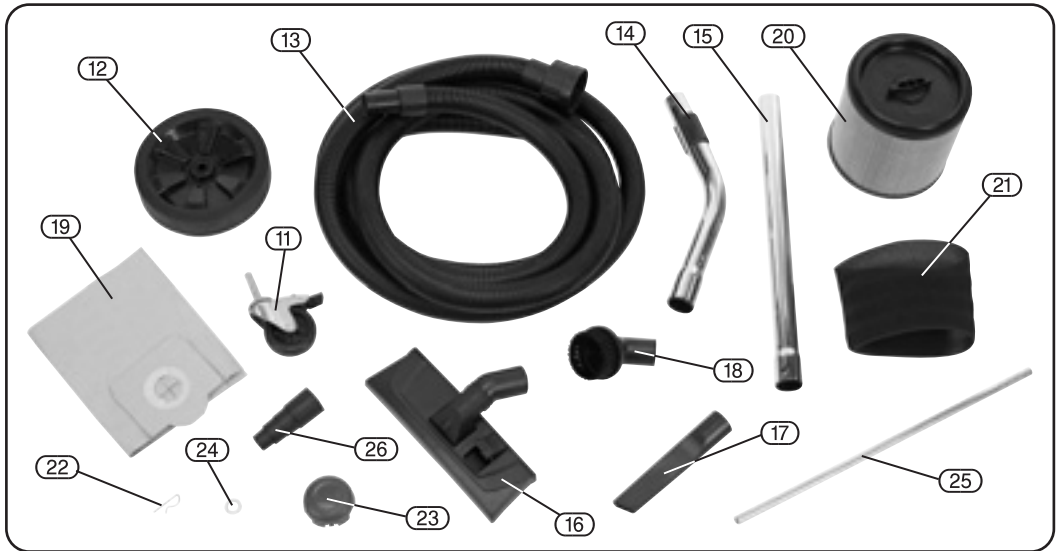

(11) Castors × 2.

(12) Rear wheels × 2.

(13) Flexible vacuum hose.

(14) Vacuum handle grip/air control.

(15) Extension tubes × 2.

(16) Vacuum attachment for floors and carpets.

(17) Crevice attachment.

(18) Brush attachment for delicate surfaces.

(19) Paper dust bag.

(20) Cartridge filter.

(21) Anti-foam filter.

(22) Wheel locking pins × 2.

(23) Wheel hub caps × 2.

(24) Wheel washers × 4.

(25) Wheel axle.



(26) Stepped power tool adaptor.

## 8. INITIAL MACHINE ASSEMBLY

### 8.1 FITTING THE REAR WHEELS


– FIGS. 1 – 2

- Pass the wheel axle (25) through the moulded brackets (25.1) situated on the underside of the machine.
- Thread a washer (24) on each end of the axle followed by the 2 rear wheels (12).
- Thread the remaining 2 washers over the ends of each wheel and then fasten in place using the 2 wheel locking pins (22).
- Snap-fit the 2 wheel hub caps (23) in place to complete the wheel assembly.

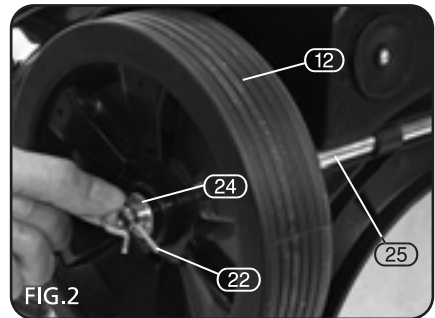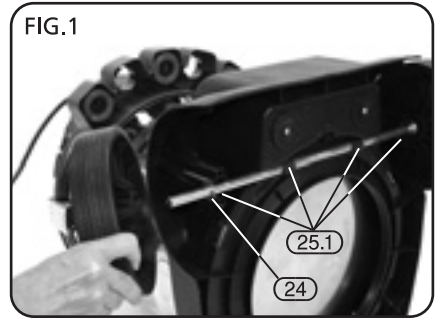


### 8.2 FITTING THE CASTORS – FIG. 3

- Snap-fit the 2 castors (11) into the slots (11.1) situated on the underside of the machine base to complete the transport assembly.

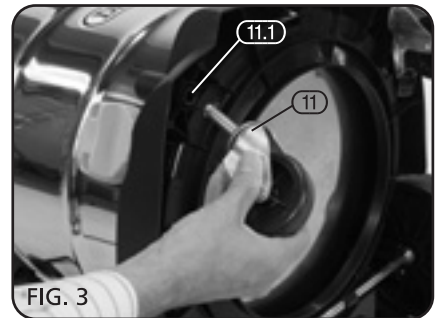

### 8.3 TANK DRAIN CAP – FIG. 4

- If not already in place, ensure that the tank drain cap (8.1) is fitted in position before using the vacuum cleaner for any operation.

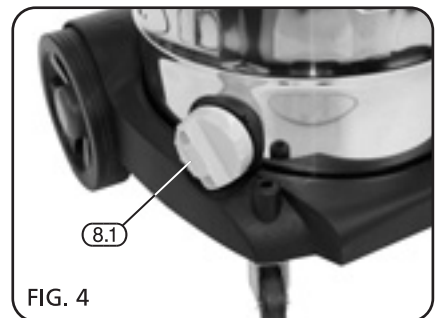

## 9. VACUUMING DRY DUST AND DIRT


### 9.1 EMPTY TANK – FIG. 5

Dispose of any liquid which may have been picked up previously.



### 9.2 REMOVAL OF THE ANTI-FOAM FILTER – FIG. 6


If already fitted, remove the anti-foam filter (21).

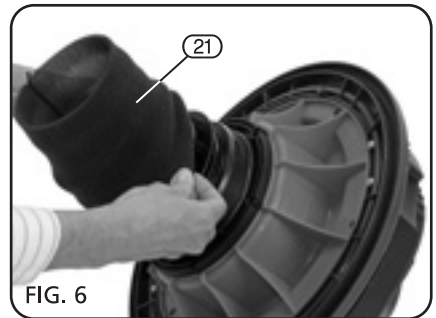

### 9.3 FIXING CARTRIDGE FILTER – FIG. 7


The cartridge filter (20) must now be fitted by placing it below the motor head as shown, and then securing it in place by turning the fixing knob (20.1) clockwise.

**NOTE:** The cleaner comes complete with a cleanable cartridge filter. The cartridge filter should be cleaned using a soft brush at regular intervals. This will ensure a longer service life and higher suction power. If the cartridge filter is not used when vacuuming dry dust and dirt motor damage will occur.

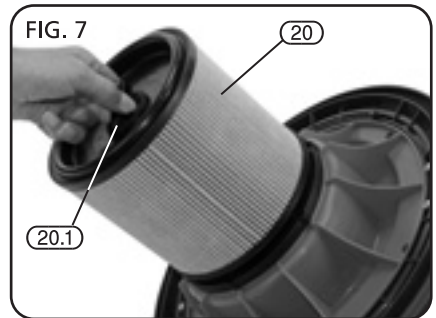

### 9.4 FIXING THE PAPER DUSTBAG – FIG. 8

Fix the paper dustbag (19) to the inner side of the vacuum hose connector (2) inside the tank. When using the paper dust bag, the life of the cartridge filter will be prolonged. The paper dustbag **NEVER** replaces the cartridge filter but, the filter cartridge can be used without the paper dustbag.

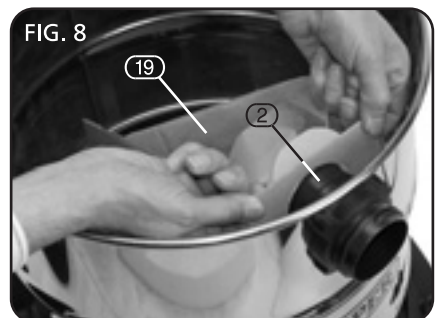

## 9. VACUUMING DRY DUST AND DIRT

### 9.5 REFITTING THE MOTOR HOUSING

#### – FIG. 9


Place housing on top as shown, then secure using the two tank catches (6).




### 9.6 CONNECTING ATTACHMENTS

#### – FIGS. 10 - 13


Insert the the head of flexible vacuum hose (13) into the vacuum hose connector (2) and twist to lock it in place.

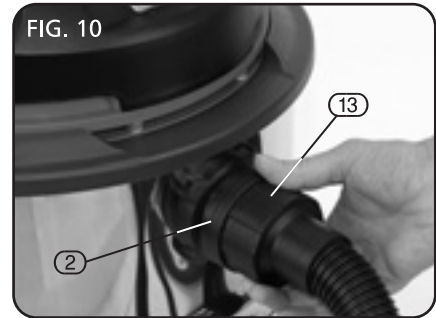

Insert the other end of the flexible vacuum hose (13.1) into the vacuum handle grip (14). The grip incorporates a suction power regulating device (14.1) (Fig.12). To obtain full suction power the regulator should be closed.

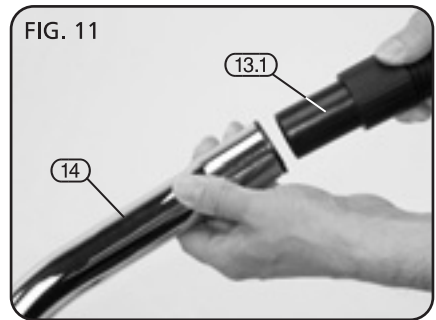


The two retractable extension tubes (15) can now be slotted together and attached, if required, to the handle grip and used in conjunction with the supplied attachments.

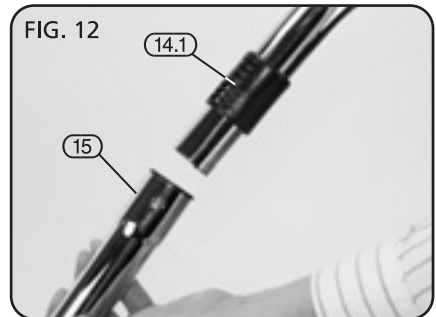



## 9. VACUUMING DRY DUST AND DIRT

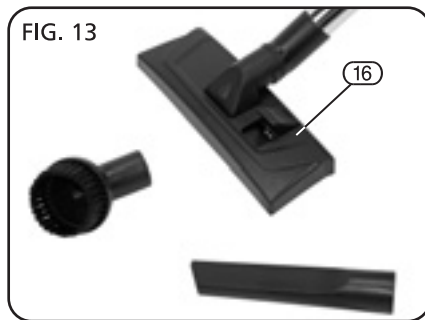
The combination attachment (16) can be used on hard floors - parquet, cork, vinyl, ceramic, etc. Any of the other attachments may be used depending upon the specific application. They are attached with a tight push fit.



### 9.7 SWITCHING ON – FIG. 14



Connect the vacuum cleaner to the power supply.

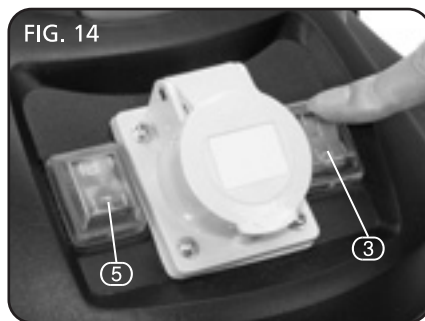
- Press switch (3) to the  position.
- Press switch (5) to the  position.



### 9.8 POWER TAKE-OFF SOCKET – FIG. 15

To use the vacuum cleaner in conjunction with a power tool for dust extraction purposes:

- Plug the power lead from the power tool into the power take-off socket (4).
- Press switch (3) to the  position.
- Press switch (5) to the  position.
- When the tool is now operated, the vacuum will begin to run and when the tool is switched off, the vacuum will stop.
- Use the adaptor supplied (26) to attach the vacuum tube to the tools dust extraction port.

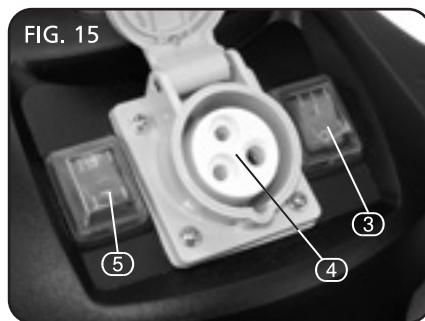

### ATTENTION: EXPLOSION AND FIRE HAZARD!

Never vacuum asbestos, inflammable fluids, such as petrol, oil, solvents, etc. Do not work near inflammable fluids or gas. Never vacuum fluids or material hotter than 60°C, such as burning cigarettes, ashes, glowing coals, etc.

If cable becomes damaged replace immediately.

Always keep the filter cartridge clean; for maximum performance.

# 10. VACUUMING FLUIDS


## 10.1 EMPTY TANK – FIG. 16

If fitted, remove the paper dust bag and empty the tank to dispose of any dirt/dust which may have been picked up previously.



## 10.2 REMOVE THE CARTRIDGE FILTER – FIG. 17


If in place, the cartridge filter (20) must now be removed by turning the fixing knob (20.1) anti-clockwise and sliding off of the motor head.

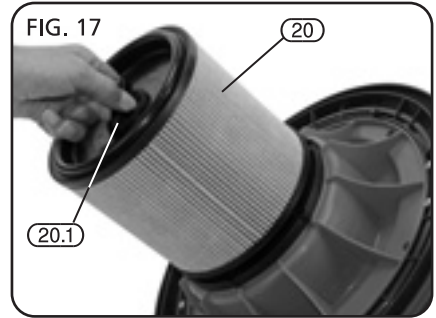

## 10.3 FITTING THE ANTI-FOAM FILTER – FIG. 18

Slide the filter (21) over the float cage.

**NEVER VACUUM DRY DUST AND DIRT WITH THIS FILTER FITTED AS IT WILL PROVIDE LITTLE OR NO PROTECTION RESULTING IN MOTOR DAMAGE.**

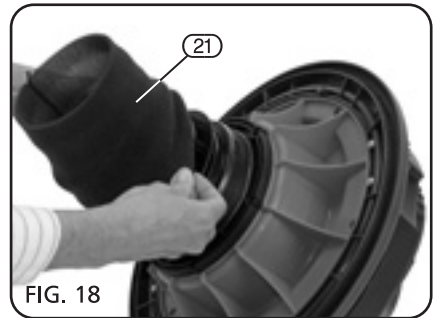

## 10.4 REFIT MOTOR HOUSING – FIG. 19

Secure using the two tank catches (6).



## 10. VACUUMING FLUIDS

**Note:** When the fluids have reached the highest permissible level in the tank, the float regulator will cover the motor filter causing the motor to work harder, it will become noisier, at this point turn off and empty the tank.



### 10.5 FITTING THE LARGE VACUUM ATTACHMENT – FIG. 20


Fit the large vacuum attachment (16) onto the end of the extension tube (15).



### 10.6 SWITCH ON – FIG. 21

Connect the vacuum cleaner to the power supply.

- Press switch (3) to the  position.
- Press switch (5) to the  position.

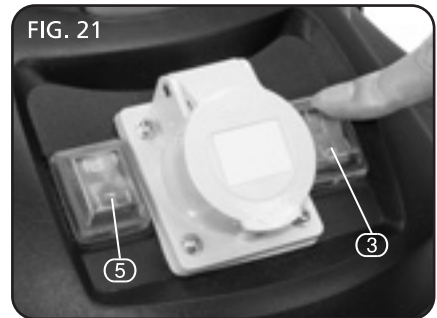

### 10.7 WATER ON LARGE AREAS – FIG. 22

**Note:** The large vacuum attachment (16) should be used on floors and other flat surface areas where the water to be picked up has dispersed over a large area but is only shallow.

The crevice nozzle (17) should be used when the water level is too high to use the large fluid nozzle.

**Note:** To ensure the air flow is adequate we recommend that the end of the nozzle is not totally immersed.



# 11. MAINTENANCE & PARTS REPLACEMENT

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tools in good working condition.

The motor must be correctly ventilated during the tools operation. For this reason avoid blocking the air inlets.

If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

- Empty tank regularly. Never leave fluids in the receptacle as these could damage the material over a period of time.
- After having picked up fluids, dry extension tubes, hose and motor parts by running the vacuum cleaner for a few minutes, **AFTER HAVING EMPTIED THE TANK.**
- Always keep spare dust bags and cartridge filters so that the vacuum cleaner is always ready for use.
- Regularly clean and wash the motor filter located inside the fluid float cage.
- Use of paper dust bags - as suction pressure decreases, replace the paper dustbag with a new one.
- Clean the cartridge filter periodically with a soft brush. This will prolong the life of the filter.

NOTE: The filter must be dry before re-using.

## 11.1 TROUBLESHOOTING GUIDE

| Symptom                                      | Possible causes   | Corrective action  |
|--|---|--|
| Vacuum will not operate.                     | <ol style="list-style-type: none"><li>1. No power supply.</li><li>2. Faulty power cord.</li><li>3. Container full.</li><li>4. Switch in the wrong position.</li></ol>                       | <ol style="list-style-type: none"><li>1. Check power supply, cord, breakers, fuses.</li><li>2. Unplug and check the power cord – if damaged, have it repaired by a professional.</li><li>3. Empty container.</li><li>4. Press the 'on' button on the motor head.</li></ol> |
| Dust comes out from the motor cover.         | <ol style="list-style-type: none"><li>1. The cartridge filter is missing or damaged.</li></ol>  | <ol style="list-style-type: none"><li>1. Attach or replace cartridge filter.</li></ol>   |
| Reduced efficiency and motor/speed vibration | <ol style="list-style-type: none"><li>1. There is a blockage in the nozzle, hose or the container inlet. The cartridge filter is clogged by fine dust.</li><li>2. Container full.</li></ol> | <ol style="list-style-type: none"><li>1. Check nozzle, hose and container inlets for blockage. Take off the filter and clean it, or install new cartridge filter.</li><li>2. Empty container.</li></ol>  |



## 12. OPTIONAL ACCESSORIES

---

### 12.1 OPTIONAL ACCESSORIES

| Stock No. | Part No. | Description.             |
|-----------|----------|--------------------------|
| 83527     | AVC132   | Suction hose.            |
| 83528     | AVC133   | Extension wand.          |
| 83529     | AVC134   | Cloth filter.            |
| 83530     | AVC135   | Dust collection bag × 3. |
| 83532     | AVC136   | Foam filter.             |
| 83533     | AVC137   | Cartridge filter.        |
| 06948     | AVC87    | Round brush.             |
| 61770     | AVC131   | Adaptor.                 |
| 61009     | AVC130   | Combo floor brush.       |
| 06946     | AVC86    | Crevice tool.            |
| 83534     | AVC138   | Air regulator handle.    |

# 13. EXPLANATION OF SYMBOLS/PICTOGRAMS

---

## 13.1 EXPLANATION OF SYMBOLS/PICTOGRAMS



**Warning!**  
Read the instruction manual.



**Warning!**  
Wear suitable respiratory protection.



**Warning!**  
Wear suitable welding eye/face protection.



Do not dispose of WEEE\*  
as unsorted municipal waste.



For indoor use.  
Do not expose to rain.



Class 1 appliance.  
(Must be earthed).

\* Waste Electrical & Electronic Equipment.

# 14. DISPOSAL

---

## 14.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE\* as unsorted municipal waste.



\* Waste Electrical & Electronic Equipment.

- **DRAPER TOOLS LIMITED,**  
Hursley Road, Chandler's Ford,  
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**  
For aftersales servicing or warranty repairs, please  
contact the Draper Tools Helpline for details of an  
agent in your local area.

YOUR DRAPER STOCKIST

DKCH1015

